

LST05-V4

Quick Start:

Connect +12V Dc AC-DC Adapter

Press S1 and S2 to select resolution (Refer to resolution chart that located at the bottom of LST05-V4)

Press Red Button to turn ON LST05-V4

Press PgUp or PaDn to select test pattern

Changing B+

Press Red button once to Turn Off LST05, Press down S5 button for 5 seconds, then change to 5V or 12V

Changing LED Driver output current A2

A2 is for LCD screen that use external LED driver. . It is for adjusting output current. By default, it is 120ma. Press S5 to adjust output current if you are suing an external LED driver

